


Upgrade of AUDIUM Comp 7.2 Passive to EXAKT version

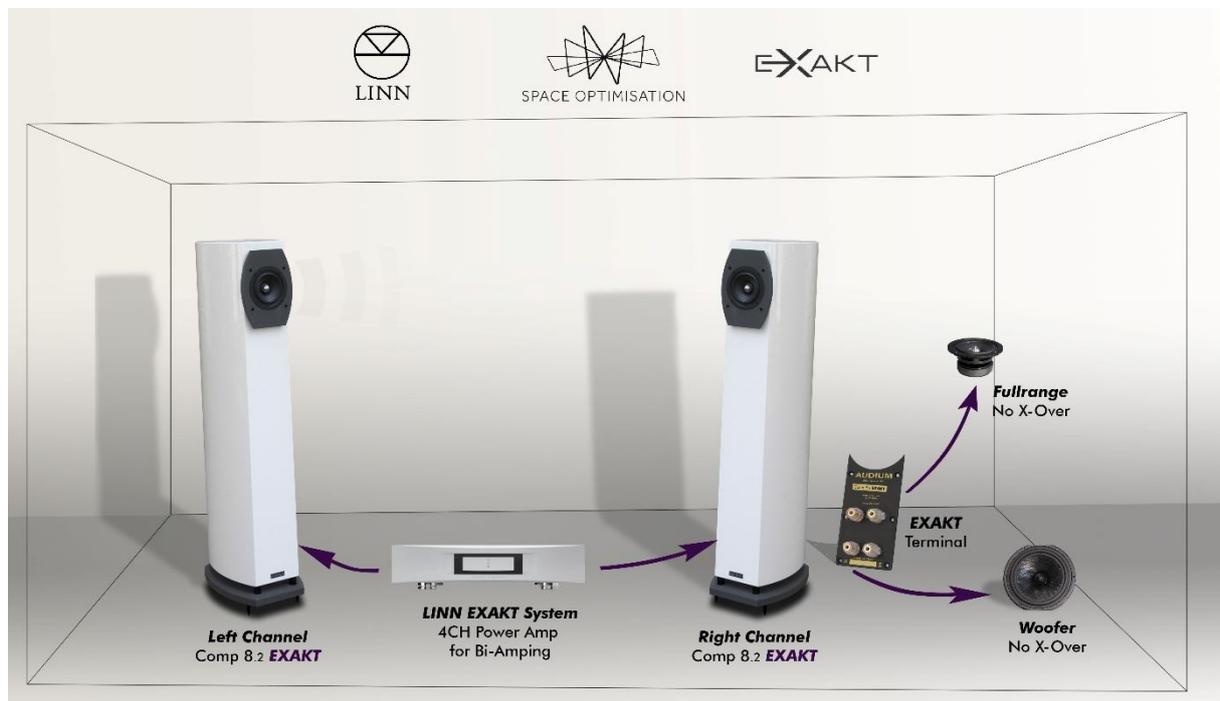

Always take care of polarity: + is marked with colour

1. Unscrew the Terminal
2. Unplug woofer Cables, unsolder fullrange cables
3. Remove the BR-Tube
4. Remove the bottom plate
5. Remove the woofer
6. Take out damping material
7. Use angular screwdriver to unmount the (big) fullrange crossover
8. Take out the fullrange crossover (I hope the cable is long enough. If not, go to point 17)
The woofer crossover can remain in the cabinet.
9. Mark the + cable (the - cable is closer to the screw / corner of the PCB) from the fullrange crossover going up to the fullrange driver. See Photo below
10. Unsolder the cable from the crossover which is going to the fullrange driver
11. Pull the cable through the terminal hole and solder it to the EXAKT terminal
12. Put the woofer cable from the EXAKT Terminal through the terminal hole
13. Remount BR-Tube. Use glue.
14. Screw in the EXAKT terminal
15. Put damping material back into cabinet
16. Connect the woofer cable to the woofer
17. Remount the woofer
18. Remount the bottom plate

DONE!

19. If the cable from the crossover to the fullrange is too short cut or unsolder the cable
20. Take out crossover
21. Unmount fullrange driver and unsolder it
22. Rip out the cable (with force)
23. Pull the delivered 1m cable through the hole in the fullrange chamber. 10cm shall be remaining.
24. Put hot glue around the hole where the cable goes into the cabinet to make it air seal
25. Solder it to the fullrange driver.
26. Remount fullrange driver
27. Continue with point 10

